DL Series Deep Well Air & Vacuum Valve, Sizes 1/2"-6," AWWA C512

DEEP WELL AIR & VACUUM VALVE SIZING

The sizing of an air valve is based on the resultant criteria of two operating conditions, that is, filling and draining the pipeline. Each grade must be independently considered in order to determine the most appropriate valve size. Air will be exhausted from the valve at the same rate at which the pipeline fills with a pressure differential maximum of 2psi across the valve.


TO CORRECTLY SIZE A DL SERIES VALVE:

- 1. Determine liquid flow capacity in the pipeline.
- 2. Determine the exhaust flow capacity using the formula at top right.
- 3. Refer to curves with CFM and pressure differential for valve size required when filling the line.
- Determine the valve size required to relieve a vacuum by admitting air through the valve. Chezy's formula at right determines the flow of water in a pipe due to gravity.
- 5. It may be necessary to consider the collapsing pressure of the pipe being vented due to vacuum formation. The steeper of the two grades should be used. For the Collapsing Pressure of Pipe Formula at right, a safety factor of 4 is used due to inconsistencies in the manufacture of pipe.
- 6. Refer to the curve with the required air capacity through the valve to relieve the vacuum and collapsing pressure of the pipe or 5 psi, whichever is lower. Pick off valve size.
- 7. Compare the valve sizes obtained for the exhaust flow and vacuum relief conditions, and select the larger valve size for the application.


PUMP CAPACITY IN GALLONS PER MINUTE		
PUMP CAP/GPM	VALVE SIZE	MODEL NUMBER
200	1/2"	DL5
201-800	1"	DL10
801-3700	2"	DL20
3701-7000	3"	DL30
7001-14000	4"	DL40
14001-29000*	6"	DL61


* For capacity over 29000, use an AL/SC Series valve

EXHAUST FLOW CAPACITY FORMULA

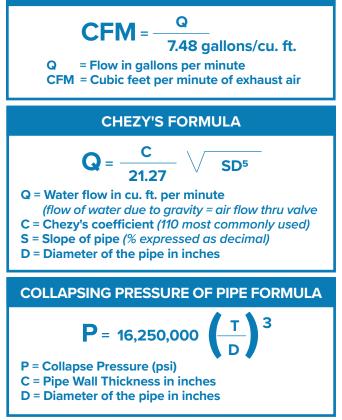

DL SERIES PERFORMANCE CURVES

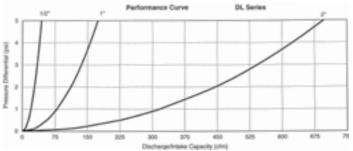

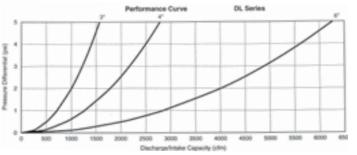

 PRODUCT LINE
 DATE
 REVISION

 DL SERIES DEEP WELL AIR & VACUUM VALVE
 12/1/2023
 0

 SHEET
 DOC. NO.

 DL Series Air & Vacuum Valve Sizing
 D-AV-DL-SIZING-r0

600 FOWLER AVE., BERWICK, PA 18603 • T: (570) 752-4524 F: (570) 752-4962 • E: SALES@CRISPINVALVE.COM